



USER INSTRUCTIONS

KEYGUARD ELECTRONIC SIZE 1



THANK YOU FOR PURCHASING A KEYGUARD ELECTRONIC

Keyguard Electronic is a high quality range of products. provided the safe is properly fitted, it carries an overnight cash rating of £1000, or ten times this sum for jewellery and valuables. If the precise rating is important it is advisable to check with your insurance company.

Please read these instructions thoroughly before attempting to use the safe, and initially perform all programming operations with the safe door open until you are fully familiar with the product

General Instructions

Any button activity is confirmed by a flashing of the yellow LED. The maximum delay between 2 entries may not be more than 20 seconds otherwise the last entry will be deleted.

DO NOT LUBRICATE THE LOCK. IF NECESSARY, LUBRICATE THE LOCKING BOLTS.

WARRANTY

- The Keyguard electronic carries a 12-month warranty in respect of materials and workmanship.
- The warranty is valid upon presentation of a receipt or invoice indicating date of purchase.

OPENING THE SAFE FOR THE FIRST TIME:

Remove the small **black** central plate on the front panel Insert the key into the keyhole and turn it counter-clockwise; the door will now open by turning the handle in a clockwise direction.

Open the battery cover on the back of the door; you can now insert 4 "AA" batteries.

PROGRAMMING YOUR SAFE:

Open the safe.

With the door open turn the handle to throw the bolts into the locked position, then remove the key.

Press the red button (This is on the inside of the door on the hinge side).

You will hear one signal tone and the yellow LED will light up; you now have 20 seconds to start programming your code

Enter the personal security number that you wish to use; your code can be between 3 and 8 digits. Now confirm your entry by pressing the "E" button.

Your safe will emit a single tone to and show that the programming was successful.

Now operate the safe several times with the door open to ensure that your personal security code has been fully accepted.

OPENING THE SAFE:

Input your personal security code then press the "E" button

The green LED will light up; you now have 5 seconds to open the safe

Turn the handle clockwise to open the safe.

LOCKING THE SAFE

Push the door closed and turn the handle in a counter-clockwise direction. Your safe is now locked.



USER INSTRUCTIONS

KEYGUARD ELECTRONIC SIZE 1



EMERGENCY MANUAL OVERRIDE

Remove the small **black** central plate on the front panel.

Insert the key into the keyhole and turn it counter-clockwise; the door will now open by turning the handle in a clockwise direction.

CHANGING YOUR PERSONAL SECURITY CODE

Begin by opening the safe.

With the door open turn the handle to throw the bolts into the locked position, then remove the key.

Press the red button (This is on the inside of the door on the hinge side)

You will hear one signal tone and the yellow LED will light up; you now have 20 seconds to start programming your code.

Enter the personal combination number that you wish to use; your code can be between 3 and 8 digits. Now confirm your entry by pressing the "C" button.

Your safe will emit a single tone to and show that the programming was successful.

Now operate the safe several times with the door open to ensure that your personal security code has been fully accepted.

SECURITY BLOCK OUT FEATURE

If you enter the wrong personal security code, you will hear five signal tones and the yellow LED will flash. If you enter the personal security code wrong three times your safe will enter a 20 seconds block out period. During this time the lock will not react to any entries.

CHANGING THE BATTERIES

Open the battery cover on the back of the door; you can now change the batteries.

AFTER-SALE TECHNICAL ASSISTANT

If in doubt, ask for advice from the retail stockist where you made your purchase.