



**BURG  
WÄCHTER**

# SecuTronic



Electronic  
combination lock

**BURG-WÄCHTER UK**  
Eurocam Technology Park  
Chase Way, Bradford BD5 8HW

**TRSE 12H**

[burg.biz/uk](http://burg.biz/uk)

## en SecuTronic – Operating instructions

Dear customer,

Thank you for choosing a BURG-WÄCHTER safe with an electronic SecuTronic locking system. These locks are certified according to ECB•S Class A. You have purchased a product that meets extremely high security requirements and was developed and manufactured according to current technical standards. This lock is certified according to EN 1300: 2018. (Classification of high-security locks according to their resistance to unauthorised opening).

**Important: Please read the entire instruction manual before programming and keep this manual safe so that you can look at it at a later date.**

We hope you enjoy your new BURG-WÄCHTER safe.

### General information

#### Activation

The electronics are switched on using the <sup>On</sup><sub>Enter</sub> button located on the keyboard. Once pressed, the display shows the BURG-WÄCHTER logo for a moment before the input screen for the pin code appears.

#### Languages

The menu navigation is available in twelve languages and can be changed via the menu item "Languages". For detailed information, please refer to chapter "Sprache/Language Menu".

#### Blocking times

To protect against tampering, the lock electronics block access to the safe for five minutes if an incorrect pin code has been entered three times in succession. Then, for every further incorrect entry, ten minutes. During this blocking time, the remaining time on the display counts down. It is not possible to open the safe during this time, even with a valid user or administrator code.

## Increasing burglary protection

Please take care your pin and administrator codes do not fall into the wrong hands. Therefore, please store your codes in a safe location so that these can only be accessed by authorised persons. In the event you lose a code, the pin code must be changed at the earliest opportunity.

- The factory code must be changed as soon as the lock is commissioned.
- Codes that are easy to guess (e.g. 1, -2, -3, -4, -5, -6) must not be used.
- Personal data (e.g. birthdays) or other data that may be guessed with knowledge of the code owner must not be used as a pin code.
- After changing a code, try the new pin code several times with the door open.

**Attention:** All changes to the administrator code, the factory set code and the user code must be carried out with the safe door open!  
After the locking system has been changed to a new code, it must be tried several times with the door is open to ensure it works.

## Input options

### Number keys:

The numbers "1" – "0" are used for input e.g. when entering the code.

### "Func" key:

The "Func" key adapts its function to the situation. You change to the previous menu level by pressing the key or you delete an entered character and you can also go back to the main menu. The display will show the current function of the key.

### "On/Enter" key:



The "On/Enter" button starts the system or selects the current menu item.



### Keys "1" and "2":

If there are several options, you can scroll up and down using these keys. The display shows this function is available with corresponding arrows.

1 .,-+	2 abc	3 def	4 ghi	5 jkl
6 mno	7 pqrs	8 tuv	9 wxyz	0 -;:
	Func	On Enter		



## Display

- A Specifies whether you can use the “Func” key to cancel the last entry (◀) or switch to the main menu (M).
- B **z:▼** appears when you can scroll down using the “2” key.
- C **1:▲** appears when you can scroll up using the “1” key.
- D  indicates the battery level.
- E  indicates whether the lock has released and the safe can be now opened.

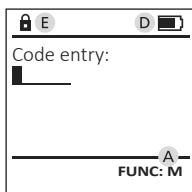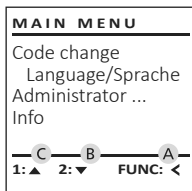

## Opening

### Opening with PIN code

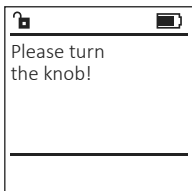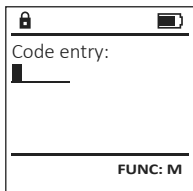

- Switch on the lock using the key On Enter.
- Enter the 6-digit PIN code (factory setting “1-2-3-4-5-6”).
- “Please turn the knob!” appears in the display.
- Turn the knob and open the door.

## Menu structure

### Menu structure overview



- Code change
- Language
- Administrator
  - > User
    - > Create
    - > Delete
  - > Restructure
  - > Processes
  - > Register
- Info
  - > System info
  - > System check

## Description of the menu functions

### Code Change menu

Changing the administrator code and the user code.  
The safe is shipped with a factory set admin code. For security reasons this must be changed to an individually set code.

- Switch on the lock using the key On  
Enter
- Then press Func.
- "Main menu" appears.
- Confirm with On  
Enter.
- You can use the keys 1 or 2 to scroll until the administrator/user is selected for which you wish to change the code for.
- Confirm with On  
Enter.
- Enter the old or factory code that was previously set using the keyboard and press On  
Enter.
- Enter the new code using the keyboard and confirm with On  
Enter.
- Repeat your entry and confirm it again with On  
Enter.
- "Code change completed!" is displayed after a correct entry.
- Press any key.

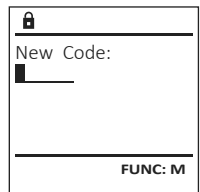
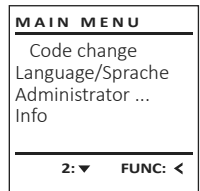


Note: When a safe lock is setup for the first time, additional information on the current date and time may be requested. This can be changed using the main menu when required.

- Enter the day (2 digits)
- Enter the month (2 digits)
- Enter the year (2 digits)
- Enter the hour (2 digits)
- Enter the minutes (2 digits)


### Language menu

- Switch on the lock using the key <sup>On</sup><sub>Enter</sub>.
- Then press **Func**.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Language" menu item is highlighted.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- "Main menu/language" appears.
- Use keys 1 or 2 to scroll until the desired language is marked.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- "Data has been saved!" appears on the display
- Press any key.

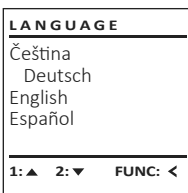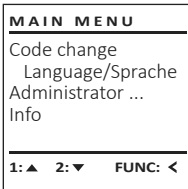

## Administrator menu

This menu has several sub-menus to group functions. The functions within this section can only be fully used with the administrator code.

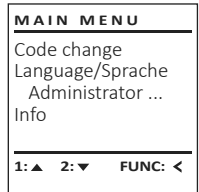




## Menu Administrator/User

### Menu Administrator/User/Create

The created user can open the safe.

#### Sub-menu Administrator/User/Create

- Switch on the lock using the key On Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On Enter.
- "Administrator" appears.
- Confirm with On Enter.
- "User" appears.
- Confirm with On Enter.
- Enter the administrator code to acquire the authorisation for programming.
- The next free memory cell is displayed (e.g. USER.0001 CD).
- Enter the 6-digit code and confirm it with On Enter.
- Save with On Enter.

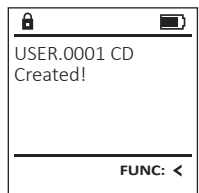
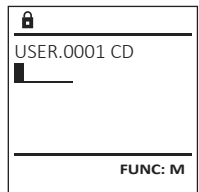
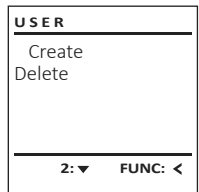


## Menu Administrator/User/Delete

Deleted users no longer have access to the safe. However, these will remain in the history.


### Sub-menu Administrator/User/Delete

- Switch on the lock using the key On Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On Enter.
- "Administrator" appears.
- Confirm with On Enter.
- "User" appears.
- Confirm with On Enter.
- "Create" appears.
- Scroll with the 1 or 2 key until the "Delete" menu item is highlighted.
- Confirm with On Enter.
- Enter the administrator code to acquire the authorisation for programming.
- You can use the keys 1 or 2 to scroll until the user is marked whose code is supposed to be deleted.
- Confirm with On Enter.
- "Dataset has been deleted!" appears.
- Press any key.

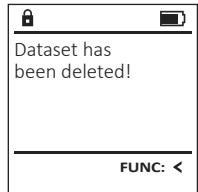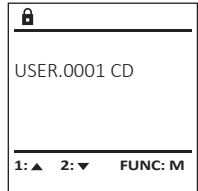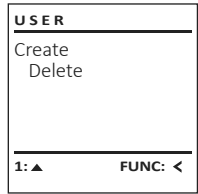

## Menu Administrator/Restructure

- Switch on the lock using the key On Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On Enter.
- "Administrator" appears.
- Scroll with the 1 or 2 key until the "Restructure" menu item is highlighted.
- Confirm with On Enter.
- Enter the administrator code to acquire the authorisation for programming.
- "Restructuring in progress!" appears.


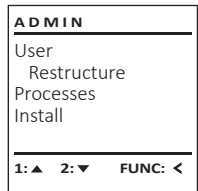




## Menu Administrator/Processes

The opening or closing history of the safe can be shown on the display under Processes.



- Switch on the lock using the key On  
Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On  
Enter.
- "Administrator" appears.
- Scroll with the 1 or 2 key until the "Processes" menu item is highlighted.
- Confirm with On  
Enter.
- Scroll with the 1 or 2 key through the data records.
- Confirm with On  
Enter.

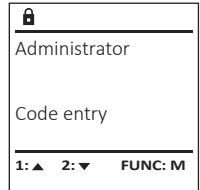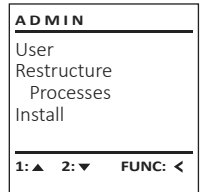

## Menu Administrator/Register


In the event of a complete system failure, the electronic control panel may have to be registered again with the locking mechanism.

- Switch on the lock using the key On  
Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On  
Enter.
- "Administrator" appears.
- Scroll with the 1 or 2 key until the "Register" menu item is highlighted.
- Confirm with On  
Enter.
- Enter the administrator code to acquire the authorisation for programming.
- "Dataset has been stored" appears.
- Press any key.

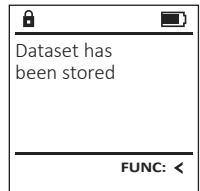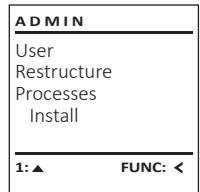



## Info menu

In this menu, you can view system information reports.

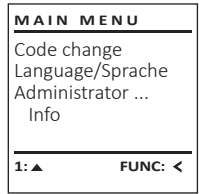



## Menu info/System info

- Switch on the lock using the key <sup>On</sup><sub>Enter</sub>.
- Then press **Func**.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Info" menu item is highlighted.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- "Info" appears.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- Confirm with <sup>On</sup><sub>Enter</sub> to get detailed information about the system after entering the administrator code with administrator rights.
- The system information is displayed.
- Scroll with button 1 or 2 to view the information.
- Use the button **Func** to return.

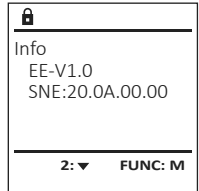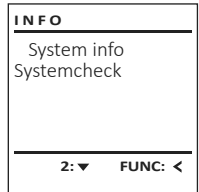


## Info/system check menu

- Switch on the lock using the key <sup>On</sup><sub>Enter</sub>.
- Then press **Func**.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Info" menu item is highlighted.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- "Info" appears.
- Scroll with the 1 or 2 key until the "System check" menu item is highlighted.
- Confirm with <sup>On</sup><sub>Enter</sub>.
- Confirm with <sup>On</sup><sub>Enter</sub> to get detailed information about the system after entering the administrator code with administrator rights.
- The system check information is displayed.
- Scroll with button 1 or 2 to view the information.
- Use the button **Func** to return.

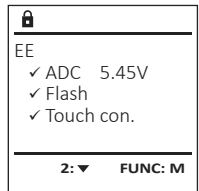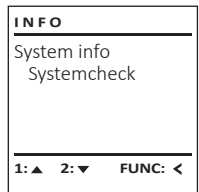


## Battery replacement


You can see the battery status at any time using the battery level indicator in the top right of the display. If the battery capacity is running low, a corresponding message appears on the display: When this notice appears, change the batteries as soon as possible.

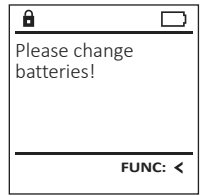

Remove the two screws on the underside of the lock electronics. This will require a Torx T8 screwdriver.

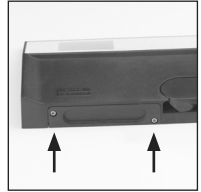


Let the lid slide out together with the batteries.

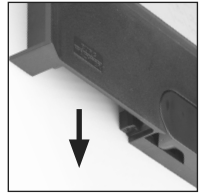

Remove the old batteries and dispose of them according to the disposal instructions. Replace the batteries with four new 1.5 V AA Mignon batteries and according to the correct polarity. For this purpose, illustrations are shown on the battery holder. Please use branded batteries and no rechargeable batteries.



Push the lid and batteries back into the locking electronics and screw them tight.

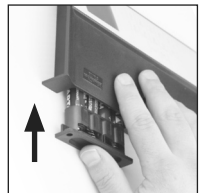

## Technical details

Number of administrator codes:	1
Number of user codes:	1 (max.)
Blocking times:	After an incorrect code is entered 3x, 5 minutes, thereafter 10 minutes
Power supply:	4x AA MIGNON LR6 ALKALINE
Date/time:	-
Updatable (firmware):	-
History number:	500

## Warranty

**BURG-WÄCHTER products comply with the technical standards in force at the time of production and adhere to our own quality standards. The guarantee only covers defects which can be proved to have resulted from production or material defects at the time of purchase. The warranty ends after two years, further claims are excluded. Defects and damage caused by e.g. transport, incorrect operation, improper use, wear etc. are excluded from the warranty. The batteries are not included in the guarantee. A short description of any defects identified must be made in writing and the device returned to the place it was purchased, together with the original packaging. After the device has been tested, and within a appropriate period of time, the guarantor will decide whether or not to repair or exchange the item.**

### Attention:

In order to deliver a flawless and high quality product to you and to better assist you in case of service or repair, it is necessary that faulty or defective devices along with the valid administrator code be presented to your dealer together with the original documentation.

For returns, all undamaged device parts must furthermore be in the factory setting due to your right of revocation. Failure to comply with this will invalidate the warranty.

## Disposal of the device

Dear customer,

Please help us avoid unnecessary waste. Should you intend to dispose of this device at any time, please remember that many components of this device contain valuable materials that can be recycled.



Please be aware that electrical and electronic equipment and batteries marked in this way must not be disposed of with household waste but collected separately. Please obtain information on the collecting points for electrical waste from the responsible authority of your city/municipality.



BURG-WÄCHTER KG hereby declares that this device complies with the Directives 2014/30/EU, (EMC) and 2011/65/EU (RoHS).

The complete text of the EU Declaration of Conformity is available at the following Internet address: [www.burg.biz](http://www.burg.biz)

## Safety recommendation

Please clean the keyboard operating surface periodically with a microfibre cloth (e.g. glasses cleaning cloth for spectacles) to remove any fingerprints on the keyboard surface.







**BURG  
WÄCHTER**

**BURG-WÄCHTER UK**  
Eurocam Technology Park  
Chase Way, Bradford BD5 8HW  
Tel: +44 (0) 1274 395 333  
E-mail: [ukcs@burg.biz](mailto:ukcs@burg.biz)

TRSE 12H

[burg.biz/uk](http://burg.biz/uk)