



Instructions

BURTON HOME Safe G1



£10,000 Cash Rating



£100,000 Jewellery Rating



Electronic











THE IDEAL HOME & OFFICE SAFE

- Available in 3 compact sizes
- High security digital safe lock
- SBD Police Approved Specification
- Independently attack tested and certified for insurance purposes to EN1143-1 Grade 1 by ECB-S
- AiS Insurance Approved
- Includes 1 height adjustable shelf
- Back and base fixing
- Installs to floors and walls (fixing kit included)

Thank you for purchasing a Burton Safe

Unboxing

The safe is **under factory setting**, enter **0123456** then press * and turn the lock clockwise to free the safe door handle. You can now open the safe door and set-up your lock to your own personalised access code.



 Please add your own lock code as soon as possible when you receive your new safe.



- Always set your lock code and test it with your safe door open.

I General Operating Instructions CombiLock

- I.I Opening and Closing
- 1.1.1 Opening the Electronic Lock with Code

0_8	PID 1 to 8 for one of the users I-8 PID 6 for the master.
1 2 3 4 5 6	is the default 0 code.
green	Turn keypad as illustrated (within 10 seconds)


Open the lock within 10 seconds by turning the keypad clockwise.



Electronic lock CLOSED → Electronic lock OPEN



When changing the battery or opening the front of the keypad

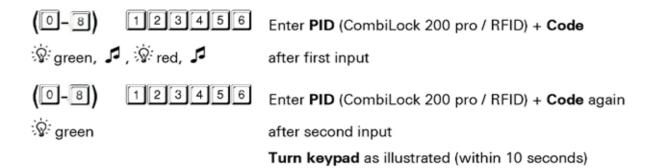

2.1 Closing the Electronic Lock

The electronic lock engages automatically 10 seconds after opening. In order to close it properly, rotate the keypad into its "home position".



Keypad Open → Keypad Locked





After securing the Safe, always examine whether the lock is locked properly: Try repeatedly to rotate the keypad. The lock is locked properly only when it is not possible to turn the keypad.

3.1 Cancelling during Input

C

4. Operation CombiLock 200 pro

4.1 Changing the Master Code

(start within 10 sec. after opening the lock):

* 0 *

123456 * SEnter old master code

6 5 4 3 2 1 * Enter new master code (sample code illustrated)

654321 * S Enter new master code

4.2 User Codes

4.2.1 Programming / Changing a User Code

(begin within 10 sec. after opening):

Max. 8 codes can be programmed.



With the Safe open, verify repeatedly whether the new code works properly.

* 1 *

1 * PID 1 to 8 for user 1 to user 8

654321 * Waster code (sample code illustrated)

or, if changing user code, enter your old user

3 4 5 6 7 8 * code

Enter new user code (sample code illustrated)
Repeat new user code

4.2.2 Deleting A User Code

(start within 10 seconds after opening the lock):



Warranty

Your new product carries a parts and labour 2 year warranty in respect of defects in materials and workmanship. In order to register your warranty you will need the serial number from your product, this can be found on the product itself. You can activate your warranty by visiting our website. www.burtonsafes.co.uk/warranty



Secure Your Valuables with a Burton Safe



THE SURE DEFENCE