

USER INSTRUCTIONS - LAMBENT LOCK

ABOUT THE LOCK

This lock requires a 4-6 digit code to open the lock. You can reset the code anytime the safe is open. A valid code entry is followed by a double beep, an invalid entry is followed by a long beep. You are provided with an emergency override key for this safe - do not keep the keys inside the safe.



How to open the safe for the first time

- Your safe should be already open with no batteries
- If your safe is not open follow 'How to open your safe with the emergency key'
- Once open, open the battery cover on the inside of the door
- Insert 4x AA batteries

How to lock the safe

- Close the safe door
- Enter a 4-6 digit code
- Press the [#] key, the safe door will lock

How to open the safe

- Enter your 4-6 digit code
- The Safe door will open

Incorrect Entry

- If an incorrect code has been entered the lock will sound a long beep
- After 4 incorrect entries a penalty time of 15 minutes will begin. During this time no other code entries can be made
- When the penalty time is over enter your code

Changing the code

- Open the safe
- Follow the steps for 'How to lock the safe' with a new 4-6 digit code
- Your code is changed

How to open the safe with the emergency key

- Remove the gold plate from the front of the safe using a hex key
- Behind the gold plate is the key hole. The key will only fit inside the lock in I position, do not force the key
- Turn the key anti-clockwise and open the safe door
- Remember to replace the gold plate once finished

Current supply / Battery change

- This safe requires 4x AA batteries to operate
- The battery compartment is located on the inside of the safe door
- Burton Safes recommends Duracell